

WI-FI MAINTENANCE AND TROUBLESHOOTING


CLEARING ROUTER SETTINGS

If you purchase a new Wi-Fi router or change the security settings on your existing router, the router settings in the thermostat need to be cleared so the new Wi-Fi router settings can be entered.

To clear router settings:

1. Touch **Menu** to open the Menu screen.
2. Touch **Wi-Fi Settings** to open the Wi-Fi Settings screen.
3. Touch **Wi-Fi Disconnect & Clear Settings** to clear all Wi-Fi settings from the thermostat. This will not remove the thermostat from your User Account.
You will be prompted to confirm your choice.
4. Touch **Yes** to continue. Touch **No** to return to the Wi-Fi Settings screen without clearing the Wi-Fi settings.

Refer to pages 4-6 for instructions on connecting the thermostat to your Wi-Fi network.

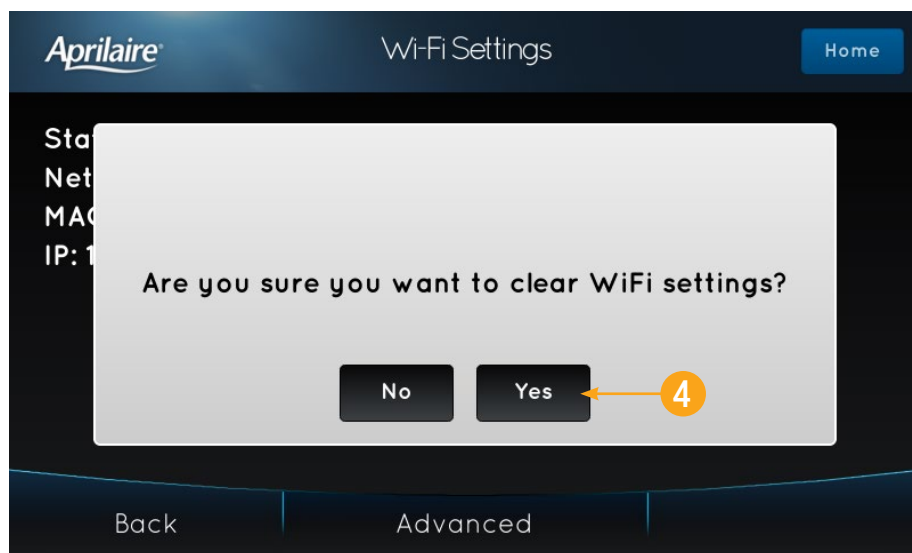

WI-FI MAINTENANCE AND TROUBLESHOOTING

REMOVING THE THERMOSTAT FROM A USER ACCOUNT

This thermostat can only be registered to one User Account. If this thermostat has previously been registered to an account that is no longer active or no longer applicable to this home, it will need to be unregistered before it can be added to a new User Account. The thermostat must have internet access through your router in order to be unregistered.

1. Touch **Menu** to open the Menu screen.
2. Touch **Wi-Fi Settings** to open the Wi-Fi Setting screen.
3. Touch **Advanced** to open the Wi-Fi Advanced screen.
4. Touch **Unregister** to remove the thermostat from a User Account. Your Wi-Fi settings will not be changed.

This will remove the thermostat from any account to which it is currently registered. Refer to page 4 for instructions on registering the thermostat to a new User Account.

